

SPD 3100

Pet Water Fountain

Quick Start Guide

Safety Notice

WARNING: Failure to follow these safety notices could result in fire, electric shock or other injuries. Read all the safety notices below before use.

- Avoid high humidity or extreme temperatures.
- Avoid long exposure to direct sunlight or strong ultraviolet light.
- Do not drop or expose the unit to intense vibration.
- Do not disassemble or try to repair the unit yourself.
- Do not expose the unit or its accessories to flammable liquids, gases or other explosives.
 - Ensure that the water level in the water tank is not lower than the minimum water level and not higher than the maximum water level.
 - Please replace the filter once a month to ensure the filtration effect.
 - If the pump becomes noisy after a period of time use, please remove the pump and clean it.

Technical Specifications

Hopper Capacity • 1.4 L

Power • DC 5V 1A
• USB

Material • ABS Plastic

Dimension • 163x164x160 mm

N. W. • 0.5KG

1


In the Box

- **Pet Water Fountain x 1**
- **Filter Cotton x 1**
- **USB cable x 1**
- **Quick Guide x 1**

Please check the condition and the accessories of the water fountain after you open the box.

2

Get to know your device

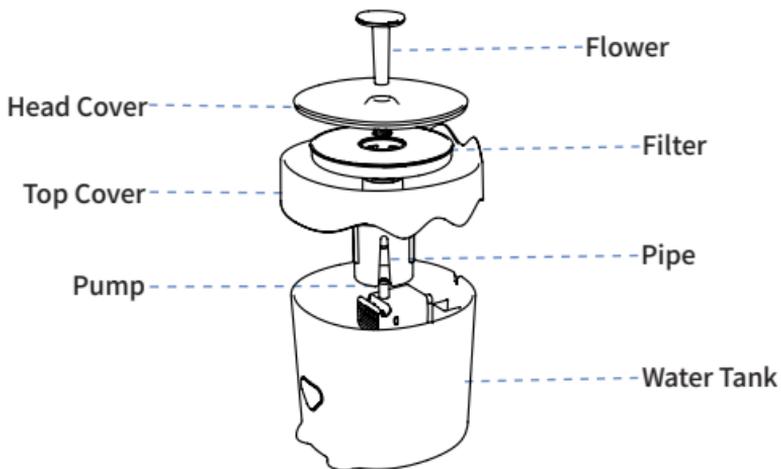


LED indicator


Light	Status
Blue light is always on	Normal
Red light flashes	Water shortage alarm
Red light is always on	Stopped

3

Get Started

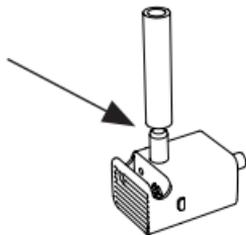


1. Fix one end of pipe on the pump.

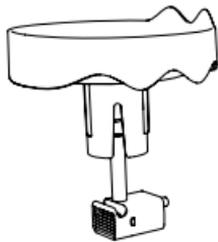

2. Fix the other end of the pipe to the lower end of the top cover.



3. Route the USB cable through the built-in cable hole in the bucket.

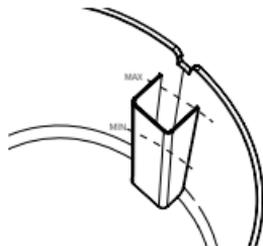

4. Ensure the water level between the minimum water level and the maximum water level



5. Fix the top cover on the water tank.



6. Place the filter in the slot in the top cover (**Wet the filter before using it**)



7. Tighten the cover in the clockwise direction



8. Install the flower and switch on the power supply.

