


Smart Life App



Scan code to watch the installation video



Single Phase

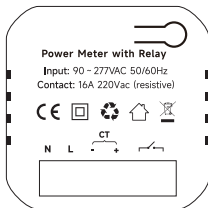

PC311-W-TY/R/N

Power Meter with Relay

Quick Start Guide

Safety Handling

WARNING: Failure to follow these safety notices could result in fire, electric shock, other injuries, or damage to the relay and other property. Read all the safety notices below before using the power meter.

- Avoid high humidity or extreme temperatures.
- Avoid long exposure to direct sunlight or strong ultraviolet light.
- Do not drop or expose the unit to intense vibration.
- Do not disassemble or try to repair the unit yourself.
- Do not expose the unit or its accessories to flammable liquids, gases or other explosives.

Technical Specifications

Connectivity


Wi-Fi	• 802.11 b/g/n @2.4GHz
BLE	• For Pairing
RF Characteristics	• Operating frequency: 2.4GHz • Internal antenna

Physical Specifications

Operating Voltage	• 90~277 Vac 50/60 Hz
Supported Systems	• Single-Phase
Power Consumption	• <2W
Voltmeters Accuracy	• $\pm 1\%$
Ammeters Accuracy	• 20A CT: $\pm 1\%$ (1-20A) , $\pm 2\%$ (0-1A) • 80A CT: $\pm 1\%$ (1-80A) , $\pm 2\%$ (0-1A) • 120A CT: $\pm 1\%$ (2-120A) , $\pm 2\%$ (0-2A) • 200A CT: $\pm 1\%$ (2-200A) , $\pm 2\%$ (0-2A) • 300A CT: $\pm 1\%$ (6-300A) , $\pm 2\%$ (2-6A) , $\pm 5\%$ (0-2A)

Clamp Inner	• 20A (optional): Ø5mm • 80A (default): Ø10mm • 120A(optional): Ø16mm • 200A(optional): Ø20mm • 300A(optional): Ø24mm
Dimension	
Relay Type	• Dry contact relay, resistive current rated 10A, max.16A
Reporting Cycle	• Energy data: every 15 seconds • Relay status: immediately
Operating Environment	• Temperature: -20 °C~+55 °C • Humidity: ≤ 90% non-condensing
Mount Type	• Sticker • DIN rail Bracket
Dimension	• 52(W) x 23(D) x 46(H)mm



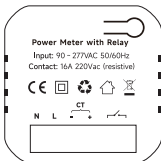


PC311-W-TY/R/N helps you monitor the amount of electricity Consumed and Produced in your single-phase power system by connecting the clamp on to the power cable. It allows you to turn On/Off of relay and check real-time or historical energy data via mobile App.

Features:

- Tuya compliant. Support automation with other Tuya device
- Single-Phase electricity system Suitable
- Remotely monitor a single-phase circuit, with 1 current transformers
- Wireless communication via Wi-Fi 2.4GHz
- Real-time Voltage, Current, PowerFactor, ActivePower, Frequency, measurement
- Bidirectional measurement: Energy Usage / Solar Production
- Historical data can be displayed and exported in the App
- Dry contact relay, resistive current rated 10A, max.16A, overload protection and relay setting

2 Get to know your device

CT: Current Transformer

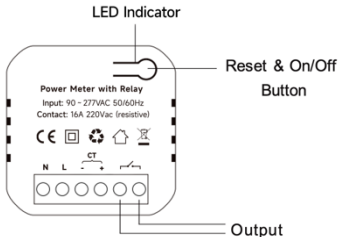

The terminal corresponds to the color of the connected CT

For Split Core CT

-: Connect to Black wire of CT

+: Connect to White wire of CT

For Donut CT

-: Connect to Black wire of CT

+: Connect to Red wire of CT

Mounting bracket



Reset & On/Off Button

- **Reset.** Press and hold the reset button for 5 seconds until the LED indicator flashes Red 3 times quickly to clear the Wi-Fi information (energy data will not be cleared). After that, the LED indicator will constantly blink and wait for pairing.
- **On/Off.** Press once to switch the relay ON/OFF.

Note: If you want to clear the energy data, please delete the device and wipe data on the app then add it again.

LED Indicator

The LED status gives the following information of the PC311-W-TY/R/N:

LED	Status	Relay	Network
Green	Blinking	ON	Wait for pairing.
	Solid on		Device has connected with cloud.
Red	Blinking	OFF	Wait for pairing.
	Solid on		Device has connected with cloud.
Yellow / Green	Rapidly blinking alternately	ON	Device is connected to the router, but failed to connect to the cloud.
Yellow / Red		OFF	
Yellow / Green	Slowly blinking alternately	ON	Wi-Fi has been configured, but failed to connect to router.
Yellow / Red		OFF	

3

Wiring

Please make sure the main breaker is off before installing!

1. Check the direction of CT

For Split Core CT: Open the clamp to see the arrow (P1→P2) or (K→L) or you can find it on the sticker on the outside of the clamp. This is the direction of CT. The CT support bi-directional sensing.



For Donut CT: The direction is from the concave surface of the CT to the flat surface. The CT support bi-directional sensing.




2. Connect AC Input cable to a socket near the Electrical Box to power on the PC311-W-TY/R/N according to the wiring diagram. And apply the CT on the electric cable and ensure the direction of CT is correct.

3. To measure energy consumption, the direction of the CT should be consistent with the direction of the electricity current flows. The power will be positive.

To measure energy production, the direction of the CT should be opposite to the direction of the electricity current flows. The power will be negative.


Scenario 1: Contactor control

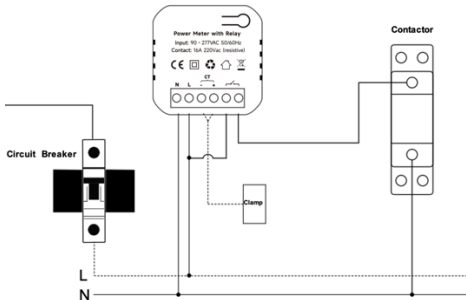

Wiring diagram


Note: When installing, please ensure that the circuit measured by CT is in the same phase as the circuit powered by PC311-W-TY/R/N.

Scenario 2: Metering on the same load to trigger the relay

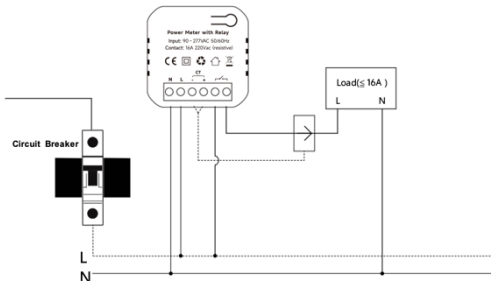

Wiring diagram

Scenario 3: Metering on the different load to trigger the relay

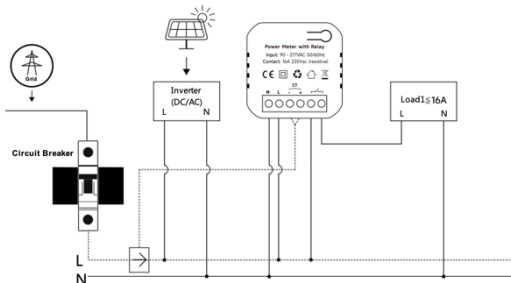

Wiring diagram

4 Mounting

The PC311-W-TY/R/N has a mounting bracket for mounting purposes. You can choose the following two mounting methods:

- Use the mounting bracket as template to mark the two holes on the wall for installing screws. Screw the mounting bracket onto the wall according to marked location. Install wall plugs if necessary.
- Sliding the mounting bracket through one end of the Din-Rail if you want to fix on the Din-Rail.

After the bracket is installed, snap the PC311-W-TY/R/N onto the bracket.




5 Configure Network

Download App

Please download the application: **Smart Life** from App Store or App Market. Also you can scan below QR code to download and install.



1. Open **Smart Life** app and click the 'Scan' button in the upper right corner of the App Home page.

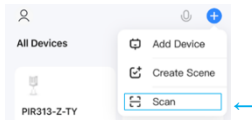

2. Scan the following QR code to configure the network.

